



OPERATE INSTRUCTION



NORMAL TIME READING

Hour, Minute, Second and Weekday.
Depress S1 to show Month, Date and Weekday.
Depress S2 to show Alarm Time.
Depress S4 to turn on the EL-Light.

NORMAL TIME SETTING

Depress S3 three times second flashing reset by S1. [Display:(TU) mark flashing].
Then select the setting modes by S2 and advance by S1 with the procedures as following:-
1st press: set the minutes
2nd press: set the hour. [during setting 12/24 hours can be selected by 1 day cycle. i.e. AM/PM in 12 hours format or H in 24 hours format].
3rd press: set the date
4th press: set the month.
5th press: set the weekday.
Then press S3 Once for return to normal time display.

TIME/SWEEP SECOND

To set the time
1. Pull out crown to B position.
2. Turn crown either way to correct time.
3. Push in crown to A position.

CHRONOGRAPH

Depress S3 Once to show chronograph mode [marks flashing: (SU), (FR), (SA)]
Depress S1 for start counting with (SA) and (SU) marks flash stop by depress S1, colon not flashing but (SU), (FR), (SA) marks flashing To reset by depress S2.
Max. range up to 23 hr. 59 min. 59 Sec.

LAP TIME

In chronograph mode, depress S1 to start counting and stop by S2 colon flashing with the lap (SU), (TH), (SA) mark flashing. To reset by depress S1 then depress S2 twice. Depress S3 Once for return to normal time display.

ALARM TIME SETTING

Depress S3 Twice for alarm mode with hour flashing, advance by S1, [Alarm mark On.]
Depress S2 Once, minutes flashing advance by S1.
Depress S3 Once, for return to normal time display.
Alarm On/Off by hold S1 and depress S2 simultaneously in normal time display.
Alarm stop by depress S2 Once.
Please note that there is a snooze feature by pressing S1 during the alarm sound. Once activated the snooze will sound the alarm 5 minutes later.

ALARM TEST

Depressing S1 and S2 simultaneously for alarm test.

HOURLY CHIME

It can be enabled or disabled by holding S2 then depress S3. All the day marks appears when the Chime enabled. [In normal time display]

EL LIGHT

Depress S4 for Light.

BATTERY

CR2016 or EQUIVALENT
391/392 or EQUIVALENT
CR1220 or EQUIVALENT
CR1616 or EQUIVALENT
LR1130 or EQUIVALENT
V389 or EQUIVALENT
CR2025 or EQUIVALENT
SR1120W or EQUIVALENT

3 YEAR LIMITED WARRANTY

The **Genender International Inc.** warranties that it will repair any failure due to defeats in materials and/or workmanship free of charge . This warranty is by **Genender International Inc.**, not by the dealer from whom it purchased. This limited warranty does not cover replacement of crystal, battery, band, strap or case. **Genender International Inc.** reserves the right to replace any or all inside components in lieu of repair. This warranty does not cover any failure to function properly due to misuse such as water immersion or severe shock. If your watch ever needs service, wrap it carefully in tissue paper or a similar soft material and pack it in a mailing carton. Send it via insured Parcel Post to: **"Service Center, PO Box 1060 Wheeling, IL60090.** Include a brief note explaining what is wrong. Be sure to print your name and address clearly. Enclose \$6.95 to cover the cost of return postage and handling.
*Do not send cash or checks, Only money orders, Master Card or Visa are accepted.

Card Holder Name: _____

M.C. _____ Visa _____

Account Number: _____

Expiration Date: _____